



ECONOMY

Solar Solutions



TECHNICAL MANUAL

Forced Circulation Boilers

Installation, maintenance & use instructions

CONTENTS

GENERAL INFORMATION.....	4
DOMESTIC HOT WATER CONSUMPTION	4
SOLAR WATER HEATER OPERATION - WATER HEATING	4
FORCED CIRCULATION SYSTEMS	5
PACKAGING	6
LABELING	7
WATER TANK TECHNICAL DATA.....	8
GENERAL INSTALLATION RULES	12
INSTALLATION POSITION	13
GENERAL PREVENTION MEASURES	14
INSTRUCTIONS FOR THE INTERCONNECTION OF COLLECTORS IN SOLAR FIELDS	15
RECOMMENDATIONS ON HEAT TRANSFER MEANS AND SAFETY AND PROTECTION MEASURES DURING FILLING, OPERATION AND MAINTENANCE OF THE SYSTEM	15
MAXIMUM OPERATING PRESSURE, PRESSURE DROP, MAXIMUM AND MINIMUM ANGLE.....	15
FORCED CIRCULATION SYSTEMS OPERATION AND INSTALLATION.....	16
WATER TANK CONNECTION	17
BURNER CONNECTION	17
RECIRCULATION CONNECTION	17
HYDRAULIC UNIT	18
CLOSED LOOP PIPING.....	18
HYDRAULIC UNIT DESCRIPTION	18
HYDRAULIC UNIT TECHNICAL DATA	19
HYDRAULIC UNIT CONNECTION	21
POST INSTALLATION INSTRUCTIONS.....	22
CHECK LIST	23

GENERAL INFORMATION

In the present manual you will find all necessary instructions with regard to the installation, operation and maintenance of the product.

The company is active in the Solar Energy Field with high-tech equipment, ultra-modern facilities and certified products of high quality. Our experience and know-how support our co operations, before and after sales, both in Europe and internationally.

Nowadays, the necessity for production and saving of energy without at the same time polluting the environment has become common knowledge. The planet's conventional energy resources are diminishing to a threatening level as our society's energy requirements are increasing, generating pollutants that affect the climate's balance. Renewable energy sources promise a solution to the energy problem as well as to pollution. Gradually, the international legislation is changing and encouraging - or even imposing - the use of alternative energy products, with the aim to satisfy energy requirements without endangering the environment.

DOMESTIC HOT WATER CONSUMPTION

Statistically, it is estimated that the mean family consumption is 35 to 50 litres daily per person. If we add the consumption of a washing machine and a dishwasher, when these are connected to the solar water storage tank, then each requires 20 litres per day (per wash). Thus, a family of four, for example, with a mean hot water consumption of 40 litres per person, needs an 160 litres solar water heater. If household appliances connected to the solar water heater are added, then the demand increases by at least 40 litres daily. In order to take full advantage of the solar water heater, maximum use of hot water should be made during daytime, so that the system can continuously produce hot water during the daylight hours, maintaining thus its maximum efficiency.

SOLAR WATER HEATING

The collecting surface absorbs solar energy and heats the liquid (water or antifreeze mixture) that circulates in the water element. This liquid is directed to the water storage tank where it heats the water. The factors that affect the temperature of the water supplied by a solar system are many and their values vary according to the season, the time of day and the location. Keeping in mind that the solar system is a system that is exposed to the weather conditions, basic parameters affecting its performance are the mains water temperature, the available solar energy and the ambient temperature. The mains water does not have a constant temperature throughout the year, being much colder in winter compared to summer. Considering 45°C as a satisfactory temperature for the domestic hot water (in order to fulfil the needs of a home) and based on statistic values, in winter the temperature of the mains water has to be increased by approximately 35°C, whereas during the summer the increase is 20°C.

Similarly, the available solar energy does not remain the same throughout the year, being much less in the winter months than in the summer months. During periods of reduced sunlight and low ambient temperatures, the solar water storage tank assures the preheating of the water and is assisted by an electrical heating element or the central heating water storage tank (triple action solar water storage tanks). As far as night-time temperature losses are concerned, these are limited as much as possible by the solar system's powerful thermal insulation. They are nevertheless affected by ambient temperatures, which vary depending on the location and the weather.



FORCED CIRCULATION SYSTEMS

Ecology - Economy - Aesthetic - Efficiency - Autonomy

With the use of solar forced circulation systems we can achieve energy savings of 70-100%, as the operating time of the boiler or the heating element is reduced dependent on the sunlight of every region and the system's size, while at the same time the carbon dioxide emissions are reduced.

Central solar systems are made of excellent materials according to international specifications and have all the certificates and tests that attest their quality.

They are highly aesthetic systems, which can be simply and quickly installed to blend with the traditional or modern architecture of a building, providing free hot water almost the whole year round. Even in regions with low sunlight they achieve the preheating of the water, which contributes to a drastically reduced consumption of conventional energy.

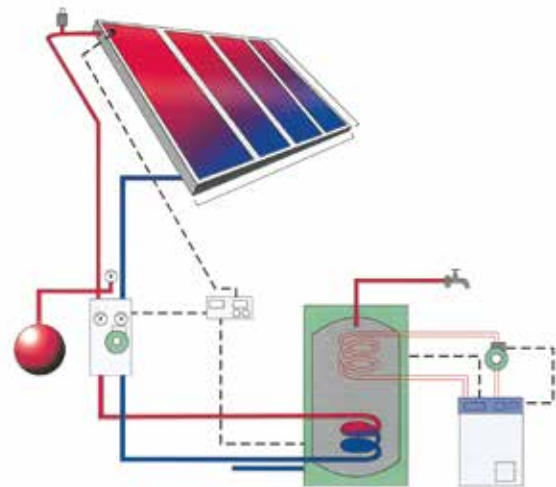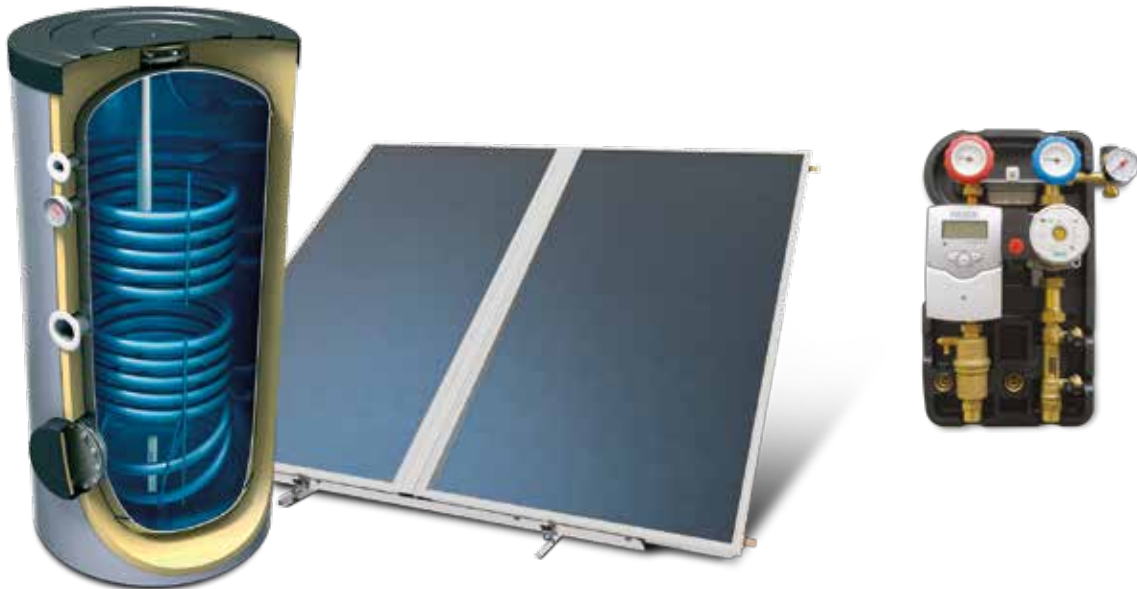

RECOMMENDED COMBINATIONS FOR FORCED CIRCULATION SYSTEMS

MODEL	DESCRIPTION
FC 160/3	Boiler 160lt, 2X1.5m ² Collectors
FC 160/4	Boiler 160lt, 2X2.0m ² Collectors
FC 200/4	Boiler 200lt, 2X2.0m ² Collectors
FC 200/6	Boiler 200lt, 3X2.0m ² Collectors
FC 300/6	Boiler 300lt, 3X2.0m ² Collectors
FC 500/10	Boiler 500lt, 5X2.0m ² Collectors
FC 1000/20	Boiler 1000lt, 10X2.0m ² Collectors


PACKAGING

Each model packaging contains all the necessary equipment:







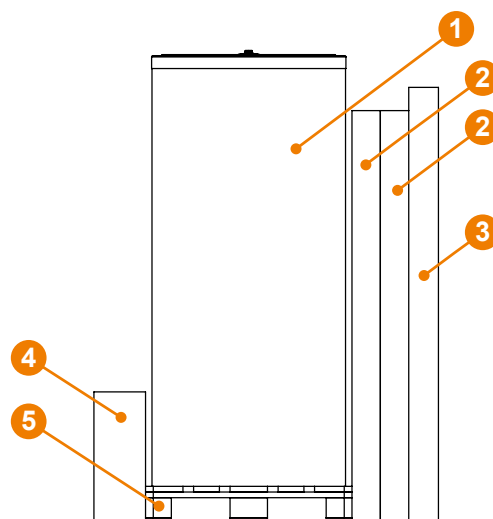




1. Water storage tank
2. Collectors*
3. Support base system & fittings and accessories*
4. Hydraulic Unit*

* *Optional*

The water storage tank is placed over a palette and tightened with a stretch film. The collector is packed in a carton box. All the parts of the support base system, with the connection fittings, the antifreeze liquid and the other accessories are packed in a carton box. The fittings and the accessories of each appliance appears in the following table:




1. Boiler
2. Collector(s)
3. Support base, fittings & Accessories
4. Hydraulic Unit
5. Palette

FC SOLAR SYSTEMS FITTINGS & ACCESSORIES					
FITTING & ACCESSORIES FOR COLLECTORS			KIT FOR FC BOILER		
	Quantity	Description		Quantity	Description
	2 PCS	END CAP Ø22 COPPER		1 PC	HYDRAULIC UNIT - DIFFERENTIAL THERMOSTAT
	1 PC	MEC. TIGHTENED FEMALE CONNECTOR 3/4, Ø22		1 PC	COLLECTOR SENSOR (BLACK)
	1 PC	T CONNECTOR WITH MANUAL VENTILATION & SENSOR OPTION		2 PCS	WATER STORAGE TANK SENSOR (GREY)
	2n* - 2 PCS	CONNECTOR Ø22 COPPER X Ø22 COPPER		1 PC	DIFFERENTIAL THERMOSTAT INSTRUCTIONS
				1 PC	HYDRAULIC UNIT INSTRUCTIONS
				1 PC	EXPANSION TANK
				1 PC	INOX FLEXIBLE TUBE

* n: number of collectors

LABELING

FC boilers are identified by a sticker including all the details of the product. The information provided on the sticker are important for the future identification of the product.

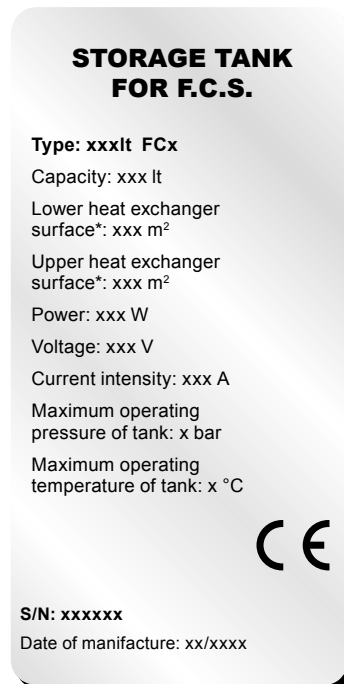

* When applied

WATER TANK TECHNICAL DATA



- **Water storage tank:** cold rolled steel with a double internal layer of enamel, baked at 860°C according to DIN 4753.

The enameling is done in our own high tech industrial facilities. The boilers are checked individually upon exit from the enameling unit, assuring the top quality of the enamel.

- **Heat exchangers for the transfer of thermal energy:**
 - Internal coil type heavy duty steel (type Tubo) integrated in the lower part of the tank, for the connection to the solar collector.
 - Optional internal coil type heavy duty steel (type Tubo) integrated in the upper part of the tank, for the connection of the secondary heating source.
- **Thermal insulation:** which minimises heat losses, maintaining the hot water temperature:
 - Expanded ecologically safe polyurethane for up to 500lt capacity types.
 - 100mm thick soft polyurethane for over 800lt capacity types.
- **External housing** of special PVC & highly resistant ABS caps of excellent aesthetics.
- **Cathode protection** with a periodically replaceable magnesium anode for effective internal protection against corrosion and mineral deposits which are caused by electrolytic reactions.

- **Electrical components:**

- Heating element rated according to the local regulations of the country of destination*
- Automatically regulated thermostat with bipolar protection and auxiliary fuse*

* The Electrical components are optional and provided to order (electricity to be used as a back up power).


All electrical components are CE marked according to **EN 60335-1 and EN 60335-2-21**.

Model	A	B	C	D	E	F	G	H	I	J	K	L	M	N	MH	HT	D Ext.	D Int.	S
FC1 160	200	785	671	284	-	-	360	-	-	-	745		785	-	314	1007	600	500	9
FC0 200	199	993	-	-	-	-	199	771	-	714	771	898	993	-	314	1207	600	500	-
FC1 200	199	993	671	284	-	-	564	-	-	714	771	898	993	-	314	1200	600	500	9
FC2 200	199	993	585	284	866	671	478	815	-	628	746	898	993	-	314	1200	600	500	7 / 5 S2
FC0 300	203	1207	-	-	-	-	203	1010	-	846	1010	1112	1207	-	314	1427	650	550	
FC1 300	203	1207	804	288	-	-	653	-	-	846	1010	1112	1207	-	314	1420	650	550	12
FC2 300	203	1207	718	288	1104	803	610	996	-	760	903	1112	1207	-	314	1420	650	550	10 / 7 S2
FC0 400	220	1156	-	-	-	-	220	943	-	813	943	1061	1156	-	331	1407	750	650	-
FC1 400	220	1156	775	302	-	-	617	-	-	813	943	1061	1156	-	331	1407	750	650	11
FC2 400	220	1156	775	302	1073	858	617	998	-	813	943	1061	1156	-	331	1407	750	650	11 / 5 S2
FC0 500	211	1445	-	-	-	-	211	1196	-	983	1196	1050	1145	-	321	1702	750	650	-
FC1 500	214	1448	944	299	-	-	750	-	-	986	1199	1353	1448	-	324	1674	750	650	15
FC2 500	214	1448	944	299	1330	1029	750	1265	-	986	1165	1353	1448	-	324	1674	750	650	15 / 7 S2
FC0 800	80	1780	-	-	-	-	272	1174	1892	1051	1273	1502	1592	-	351	1937	990	790	-
FC1 800	83	1273	929	269	-	-	756	-	-	1051	1780	1502	1592	-	351	1937	990	790	12
FC2 800	83	1778	929	269	1492	1105	756	1363	-	1051	1273	1502	1592	-	351	1937	990	790	12 / 9 S2
FC0 1000	80	1846	-	-	-	-	272	1174	1654	1132	1273	1383	1475	-	354	2002	1050	850	-
FC1 1000	82	1274	987	272	-	-	830	-	-	1132	1846	1383	1475	-	354	2002	1050	850	13
FC2 1000	82	1874	987	272	1475	1174	817	1374	-	1132	1274	1383	1475	-	354	2002	1050	850	13 / 7 S2
FC0 1500	90	1750	-	-	-	-	367	1080	-	1168	1250	1666	1768	2061	468	2193	1200	1000	-
FC1 1500	90	2061	1081	421	-	-	579	-	-	1168	1378	1666	1768	-	468	2193	1200	1000	12
FC2 1500	90	2061	1081	421	1694	1251	579	1329	-	1168	1378	1666	1768	-	468	2193	1200	1000	12 / 8 S2
FC0 2000	90	1915	-	-	-	-	397	1141	-	1287	1370	1827	1927	2263	497	2399	1300	1100	-
FC1 2000	90	2263	1244	420	-	-	587	-	-	1287	1560	1827	1927	-	497	2399	1300	1100	15
FC2 2000	90	2263	1244	420	1875	1380	587	1537	-	1287	1560	1827	1927	-	497	2399	1300	1100	15 / 9 S2

FC0: buffer **FC1:** boiler with 1 HE (solar) **FC2:** boiler with 2HE (solar and backup) **S:** Spiral (No of turns)


*units in mm

FC0

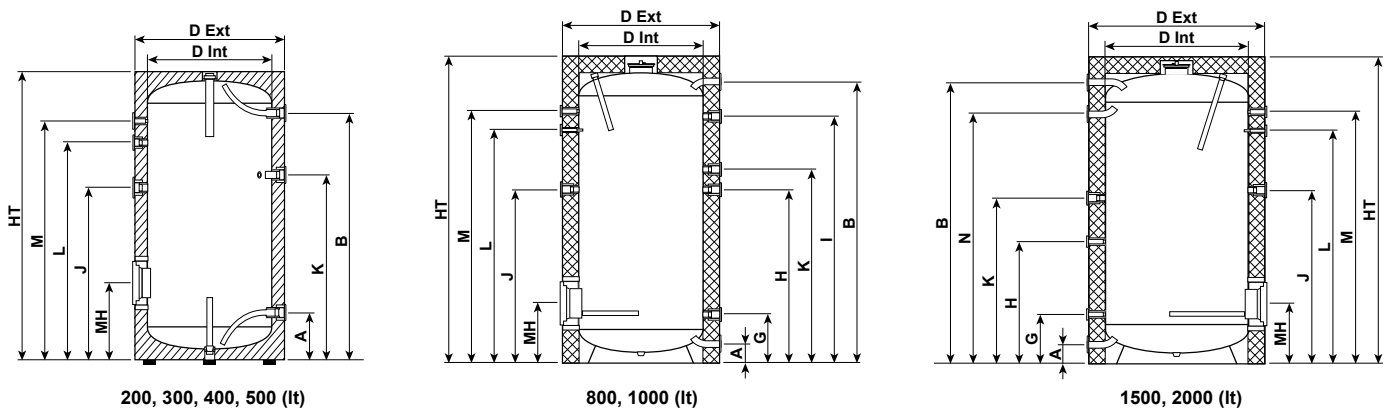


	Description	200, 300, 400, 500 (lt)	800, 1000 (lt)	1500, 2000 (lt)
A	Cold water inlet	1" F	1 1/2" M	2" M
B	Hot water outlet	1" F	1 1/2" M	2" M
G	Sensor pocket 1	1/2" F	1/2" F	1/2" F
H	Sensor pocket 2	1/2" F	1/2" F	1/2" F
I	Sensor pocket 3	1/2" F	1/2" F	-
J	Heating element	1 1/2" F	1 1/2" F	1 1/2" F
K	Recirculation	3/4" F	3/4" F	1 1/2" F
L	Thermometer	1/2" F	1/2" F	1/2" F
M	Thermoregulator	1/2" F	1/2" F	1/2" F
N	Inlet heat source	-	-	2" M

FC1

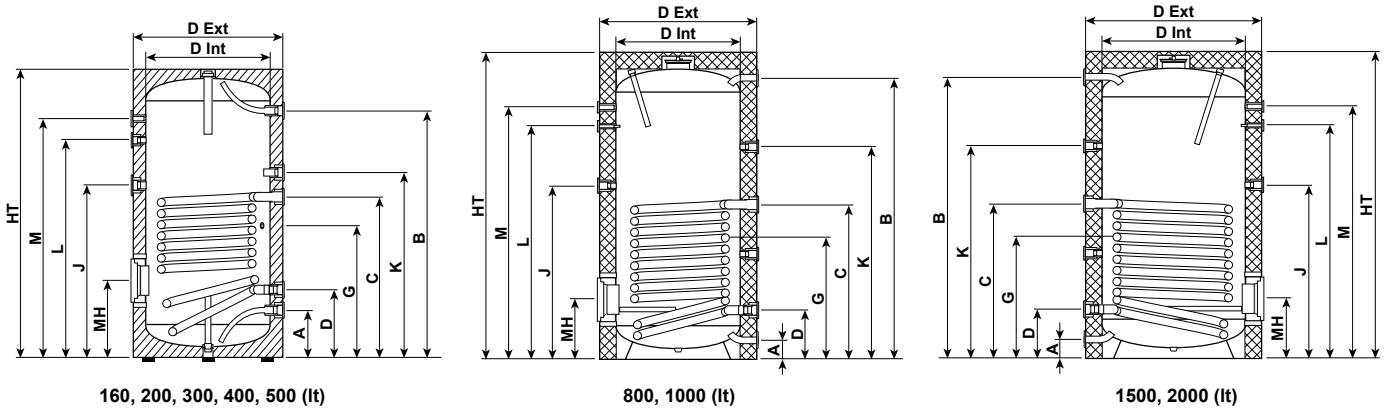

	Description	160, 200, 300, 400, 500 (lt)	800, 1000 (lt)	1500, 2000 (lt)
A	Cold water inlet	1" F	1 1/2" M	2" M
B	Hot water outlet	1" F	1 1/2" M	2" M
C	Heat exchanger Inlet	1" F	1 1/2" M	1 1/2" M
D	Heat exchanger Outlet	1" F	1 1/2" M	1 1/2" M
G	Sensor pocket 1	1/2" F	1/2" F	1/2" F
J	Heating element	1 1/2" F	1 1/2" F	1 1/2" F
K	Recirculation	3/4" F	3/4" F	1 1/2" F
L	Thermometer	1/2" F	1/2" F	1/2" F
M	Thermoregulator	1/2" F	1/2" F	1/2" F

FC2

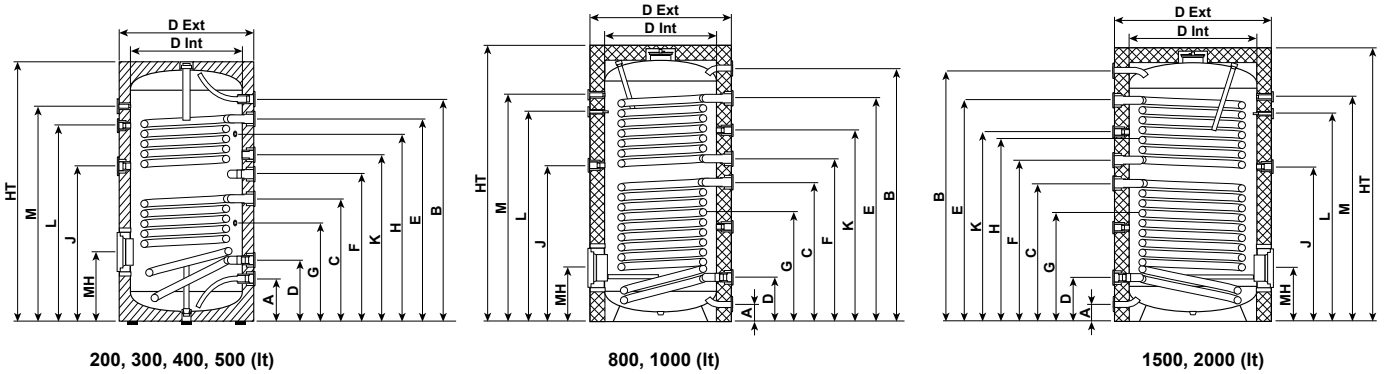

	Description	200, 300, 400, 500 (lt)	800, 1000 (lt)	1500, 2000 (lt)
A	Cold water inlet	1" F	1 1/2" M	2" M
B	Hot water outlet	1" F	1 1/2" M	2" M
C	Lower Heat exchanger Inlet	1" F	1 1/2" M	1 1/2" M
D	Lower Heat exchanger Outlet	1" F	1 1/2" M	1 1/2" M
E	Upper Heat exchanger Inlet	1" F	1" M	1 1/2" M
F	Upper Heat exchanger Outlet	1" F	1" M	1 1/2" M
G	Sensor pocket 1	1/2" F	1/2" F	1/2" F
H	Sensor pocket 2	1/2" F	1/2" F	1/2" F
J	Heating element	1 1/2" F	1 1/2" F	1 1/2" F
K	Recirculation	3/4" F	3/4" F	1 1/2" F
L	Thermometer	1/2" F	1/2" F	1/2" F
M	Thermoregulator	1/2" F	1/2" F	1/2" F

FC0									
MODEL		200	300	400	500	800	1000	1500	2000
Total capacity (EN 12897)	l	200	300	400	500	800	1000	1500	2000
Actual capacity (EN 12897)	l	206	302	404	507	805	977	1492	1916
Net Weight	kg	45	66	117	125	175	211	338	388
Insulation	mm	50	50	50	50	100	100	100	100
Max. working temperature	°C	95	95	95	95	95	95	95	95
Max. pressure of water tank	MPa	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8

FC1										
MODEL		160	200	300	400	500	800	1000	1500	2000
Total capacity (EN 12897)	l	160	200	300	400	500	800	988	1500	1950
Actual capacity (EN 12897)	l	156	198	291	392	789	774	941	1455	1867
Net Weight	kg	54	65	92	137	145	221	233	382	454
Insulation	mm	50	50	50	50	50	100	100	100	100
Heat exchanger surface (S1 - lower HE)	m²	0.96	0.96	1.45	1.65	2.25	2.89	3.45	3.47	4.5
Heat exchanger capacity (S1)	l	5.8	5.8	8.8	10	13.7	26.2	31.3	31.4	41.6
Exchanged power of HE S1 in continuous mode										
70-90°C	kW	39	39	52	61	86	148	175	175	250
60-80°C		31	31	39	47	64	107	130	140	195
50-70°C		17	17	29	33	41	70	85	100	130
50-60°C		9	9	24	17	20	50	56	80	68
"Max. flow rate of DHW with ΔT35°C (S1); continuous mode"										
70-90°C	l/min	28	28	37	44	62	61	72	72	102
60-80°C		22	22	28	34	46	44	53	57	80
50-70°C		12	12	21	24	28	29	35	41	53
50-60°C		13	13	34	25	27	20	23	33	2
Quantity of hot water MIX 45°C (S1)	l	190	240	330	412	553	845	1081	1728	2145
Heat loss (ΔT45K)	kW/24h	1.6	1.7	2.1	2.8	3.1	5.1	5.3	6.5	8.3
Max. working temperature	°C	95	95	95	95	95	95	95	95	95
Max. working temperature coil HE	°C	110	110	110	110	110	110	110	110	110
Max. pressure of water tank	MPa	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8
Max. pressure of coil heat exchanger	MPa	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6

FC2									
MODEL		200	300	400	500	800	1000	1500	2000
Total capacity (EN 12897)	l	200	300	400	500	800	977	1500	1928
Actual capacity (EN 12897)	l	196	286	386	482	762	931	1430	1836
Net Weight	kg	70	100	146	158	252	279	421	501
Insulation	mm	50	50	50	50	100	100	100	100
Heat exchanger surface (S1 - lower HE)	m²	0.75	1.21	1.65	2.25	2.89	3.45	3.47	4.5
Heat exchanger surface (S2 - upper HE)	m²	0.54	0.85	0.76	1.04	1.54	1.31	2.3	2.7
Heat exchanger capacity (S1)	l	4.6	7.4	10	13.7	26.2	31.3	31.4	41.6
Heat exchanger capacity (S2)	l	3.3	5.2	4.6	6.4	9.4	7.9	20.5	25.2
Exchanged power of HE S1 in continuous mode									
70-90°C	kW	29	45	61	86	148	175	175	250
60-80°C		22	33	47	64	107	130	140	195
50-70°C		14	25	33	41	70	85	100	130
50-60°C		7	20	17	20	50	56	80	68
Exchanged power of HE S2 in continuous mode									
70-90°C	kW	19	32	30	39	87	72	120	117
60-80°C		13	24	21	27	57	50	95	83
50-70°C		9	15	12	17	36	30	68	51
50-60°C		5	9	4	6	20	17	51	24
"Max. flow rate of DHW with ΔT35°C (S1); continuous mode"									
70-90°C	l/min	21	33	44	62	61	72	72	102
60-80°C		16	24	34	46	44	53	57	80
50-70°C		10	18	24	28	29	35	41	53
50-60°C		11	28	25	27	20	23	33	26
"Max. flow rate of DHW with ΔT35°C (S2); continuous mode"									
70-90°C	l/min	14	21	21	29	36	29	49	46
60-80°C		9	17	15	19	23	20	39	34
50-70°C		7	11	9	12	15	12	28	21
50-60°C		8	13	6	10	8	7	21	10
Quantity of hot water MIX 45°C (S1)	l	225	302	405	510	823	1055	1660	2080
Quantity of hot water MIX 45°C (S2)	l	111	151	200	250	401	503	611	991
Heat loss (ΔT45K)	kW/24h	1.7	2.1	2.8	3.1	5.1	5.3	6.5	8.3
Max. working temperature	°C	95	95	95	95	95	95	95	95
Max. working temperature coil HE	°C	110	110	110	110	110	110	110	110
Max. pressure of water tank	MPa	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8
Max. pressure of coil heat exchanger	MPa	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6



GENERAL INSTALLATION RULES

ATTENTION! Installation must be in compliance with local & national rules concerning water and electrical installations (plumbing, electricity, hygiene, urban and others).

The solar system's packaging must be removed at the site of installation in order to protect the device from shocks during its transportation, making sure that the collectors are not supported on their pipe joints. Until installation is completed, the collector's glass must remain covered until the water storage tank is filled with domestic water, so as to avoid the boiling of the filling liquid or the breaking of the glass. The plastic protective caps must be removed from the water storage tank's and the collectors' pipe joints.

Installation location - shading: Prior to installation, a proper selection of the location must be made by the installer (in agreement with the customer), and the surface must be checked (taking into consideration its static resistance), so that it can bear the weight of the system. On inclined roofs the system should not be placed between two beams but above a single one. The position chosen for the solar collector installation should not be shaded by any obstacles such as trees, buildings and other all year round, so as to ensure at least 4 hours of uninhibited exposure of the collector to the sun during the midday hours.

LATITUDE	DISTANCE BETWEEN THE OBSTACLE AND THE COLLECTOR (L)
0° - 25°	1.0 x H
26° - 35°	1.5 x H
36° - 45°	2.0 x H
46° - 50°	2.5 x H
> 50°	3.0 x H

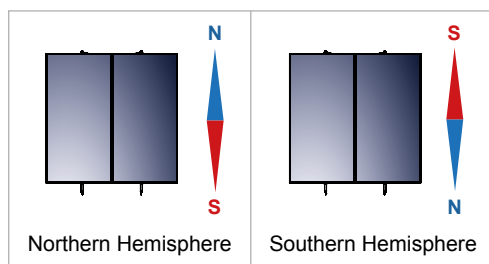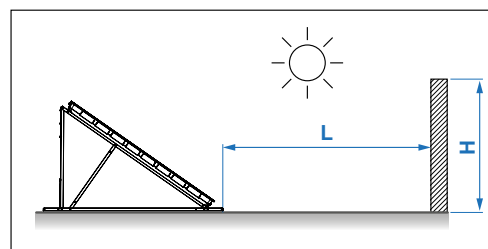

Orientation - optimum angle: a basic factor for the system's optimum performance is the selection of its angle and orientation for its particular location and the time during which the maximum gain is required.

The solar system should be positioned so that the collector's surface faces the geographical south, if the installation takes place in the Northern Hemisphere (and the geographical north for the Southern Hemisphere), i.e. it should always face the Equator.

Any deviation means a reduction in the system's performance. If a deviation from the proper orientation cannot be avoided, then the system's performance should be corrected by increasing the collector surface, following a study and evaluation of the specific conditions that apply. As the sun ray's angle of attack varies with time but also depending on the system's location, the collector's angle should be approximately equal to the installation location's latitude. At this angle the maximum energy gain on an annual basis is achieved.

Installation particularities: In case there is no compatibility between the surface where the solar collector will be installed (inclined or flat) and the standard equipment provided with the system, a different kind of equipment should be used. The responsibility for the equipment chosen lies on the installer and in no case on the company. It is up to the installer to propose & install the different equipment required, who must previously agree it with the customer.

Special weather conditions: In regions suffering from heavy snowfalls, please make sure that the snow is always timely removed. For this case and cases of regions with storms, high wind velocity, rainfall, cyclones, tornadoes, the system must be placed on the roof as firmly as possible and must be tightened with extra metal stripes. In areas where these conditions occur and hail of more than 20mm in diameter is to be observed, it is recommended that insurance for the solar collector is issued.

Piping: the routing of the piping and cabling must be agreed upon between the installer and the client, so as to ensure the proper installation of the solar system in compliance with local rules concerning water and electrical installations. Make sure that the tubes connecting the storage tank with the collector and the piping to/from the water heater are insulated in such a way that they can withstand temperatures covering the range of: -30°C to 120°C. Anti-UV protection must be used for the insulation.

Antifreeze Liquid: The special heat transfer medium used in the closed circuit protects the system from freezing and from salt accumulation inside the collector tubes. The thermal fluid must be well mixed with water in a percentage that is necessary to protect the system. The responsibility for the appropriate heat transfer medium quantity as well as for the use of other liquid than the one accompanying the solar water heater lies on the installer and in no case on the company. The use of water or inappropriate liquid may annul the warranty validity.

After the installation is completed, the area where the work was executed should be clean & tidy. The warranty should be filled in and the customer should sign it and immediately mail it to the company. The customer should fill in the check list provided by the company. The company does not hold any responsibility that may be the result of an inappropriate installation or incorrect use of components used for the solar water heater installation.

INSTALLATION POSITION

The installation is only allowed on roofs and flat surfaces of adequate bearing capacity. Before you proceed with the installation, make sure that the roof and/or the construction is of adequate bearing capacity in terms of statics, always according to the expected maximum loads at the installation point. If the installation is in a place with an extremely big wind and snow load, the system as a whole should be statically checked by a skilled person, e.g. a specialized engineer. In special cases, strengthening or more solid constructions may be required.

Space requirements for installation on the roof (TILED ROOF)

For the installation on the roof the following points must be taken care of:

- The minimum distances from the ends of the roof should be:
 - From the sides: distance equal to the width of two tiles
 - From the top of the roof: distance equal to three rows of tiles
- The minimum distance limit of 0.8 m should necessarily be respected, in order for the collectors and the mounting accessories not to be exposed to winds the power of which increases on the perimetrical edges of the roof.

Space requirements for free standing installation (FLAT ROOF)

The system should be installed at least 1.5 m away from the edges of the roof so as for:

- The systems to be accessible for maintenance reasons.
- The systems and the fixing system not to be exposed to strong winds which are developed at the ends and edges of the roof.
- The snow to be removed.

GENERAL PREVENTION MEASURES

- Please respect the instructions related to accidents prevention and the safety rules during the installation of the solar thermal systems as well as the piping.
- Please keep the work place clear and free of objects obstructing the execution of works.
- Do not let children, pets and other people to come in contact with the tools or close to the working place. This has to be respected, especially in case of existing buildings renovation.
- Store the antifreeze liquid in a safe place away from children.
- During the execution of maintenance, service or installation modification works, please remove the electrical devices and tools current collector or protect the electrical devices and electrical tools against unintended activation.
- Use only the tools intended to be used for this specific solar system. The use of other components or inappropriate tools can cause accidents.

Requirements related to the personnel

- The installation of our Solar Thermal systems can only be undertaken by authorized specialized companies and trained personnel.
- Works in electrical installations or conductors have to be executed by trained & specialized electro technicians only.

Labour uniforms

- Have protection glasses on, as well as appropriate work uniform, protection shoes, protection helmet and special long hair net.
- Do not wear baggy clothes or jewelry, as they may be trapped in movable parts.
- If, despite the use of protection glasses, antifreeze liquid comes in contact with your eyes, wash off your eyes with plenty of water and with the eyes wide open.
- Please wear protection helmet during the installation works executed at the level of or above the head.

Installation of the water storage tank

- For the transportation, mounting & installation of the tank use forklifts suitable for the dimension and weight of the tank.
- Please protect the enameling surface from beatings during transportation and installation.
- Due to the tank's weight, there is a risk of accidents. Please make sure that the bearing capacity of the ground where the tank is going to be installed is adequate, when the tank is full.

INSTRUCTIONS FOR THE INTERCONNECTION OF COLLECTORS IN SOLAR FIELDS

In a central collector bank, the maximum number of collectors, must not be greater than seven-eight (e.g. 14-16m²) per row. The collector banks must be connected in parallel between themselves and at a distance of 90cm (when at an angle of 25°) to 120 cm (when at an angle of 40°). At the beginning and the end of each line, there must be a valve and a 3/4" x 1/2" x 3/4" T-piece for the installation of a submersible thermometer. In addition at the end of the last row, the differential thermostat sensor be placed in place of the collector's sensor (Ø8). The temperature difference of the differential thermostat must be set to 8°C, when the boiler sensor is at the top point and to 10°C, when the boiler sensor is at mid point. For example, for a 20m² bank of collectors (i.e. 10 collectors of 2m²) we recommend: 20m² x 40 lt/m²h = 800 lt/h and Ø18 diameter piping connecting the collectors to the boiler, insulated with the respective insulation.

RECOMMENDATIONS ON HEAT TRANSFER MEANS AND SAFETY AND PROTECTION MEASURES DURING FILLING, OPERATION AND MAINTENANCE OF THE SYSTEM

For the protection of the collectors' circuit from frost, a solution of water and propylene glycol is used, which is non-toxic, at a ratio suitable to provide frost protection down to -10° within the collector at an exterior temperature of -20°.

Once the system has been placed and until the installation is complete the glass panels of the collectors must remain covered, until the boiler is filled with service water, so as to avoid the boiling of the filling liquid or the breakage of the glass.

The system must have the filling liquid replaced or topped up every 2 - 3 years. The filling must be accomplished with a suitably diluted liquid. In addition, the circuit needs the provision of a differential thermostat with a sensor for the protection of the circuit from frost which shall activate the circulation pump when the internal temperature reaches +4°C.

Additionally, under no circumstances must the automatic filling valve be left open, as there is the danger that if the collector bank has a small leak at some point which is leaking water, the automatic filling valve (if left open) will continuously top up the system with water and so the ratio of the anti freeze liquid will be altered and the collectors may break at the first sign of frost.

MAXIMUM OPERATING PRESSURE, PRESSURE DROP, MAXIMUM AND MINIMUM ANGLE

The maximum operating pressure (taking into account the increase in pressure due to the water's expansion) must not exceed 400 kPa. The ideal water flow in a central system is 40 lt/m²h to 70 lt/m²h and the pressure drop per meter of installed pipe (supply and return to the collectors) is 30mm of water. This is the data that is used for calculating the dimensions of the circulation pump in each installation.

NOTE: To the pressure drop of 30mm of water per meter of installed pipe one must add 10mm of water per square meter of installed collector.

A basic factor in the optimum performance of the system is the correct selection of angle and orientation, in relation to the installation site and the period during which we want the maximum yield. The solar system must be oriented so that the collecting surface faces the geographical south for the northern hemisphere (and the geographical north for the southern hemisphere), i.e. it should always face the equator. Any deviation in the orientation means a drop in the system's performance. If a deviation from the correct orientation cannot be avoided, then the system's performance must be corrected by increasing the collector surface, after study and evaluation of the particular circumstances. As the solar radiation's angle of attack changes over time and in relation to the system's installation site, the collector's angle shall have to be equal to the site's latitude ±5°. At this angle the maximum yield is achieved on an annual basis. The system must not be shaded by trees, buildings or other obstacles so as to ensure 4 hours of unimpeded exposure of the collector area during the midday hours.

FORCED CIRCULATION SYSTEMS OPERATION AND INSTALLATION

Forced circulation central solar systems are used for the production of hot water for domestic use. They are an ecological proposal and an efficient energy solution, combining high efficiency, autonomy, design, ease of installation and savings, as the cost for the consumption of conventional energy sources is significantly reduced.

OPERATION: The system's automations constantly monitor the temperature difference between the collectors and the boiler and give the relevant orders to assure the constant supply of hot water according to the circuit settings. The differential thermostat is electronically programmed to control the differential temperature and is provided with communication keys and a screen on which the parameters and messages are displayed. The system is also provided with:

- Antifrost protection system for the closed loop.
- Closed loop overheating protection system.

When the collector temperature exceeds the boiler temperature by 6-10°C, the solar system's circulation pump is activated (start differential temperature). The circulation pump will stop when the temperature difference is reduced to 4°C (Hysteresis). In case of system inertia, an operational command can be given to a back up power source (electricity or utilisation of central heating).

COLLECTORS

1. Collectors
2. Air bleeder
3. Thermometer*
4. Regulation valve*
5. Expansion tank
6. Brake valve
7. Evacuation valve

*Optionally, for more than one set

HYDRAULIC UNIT


10. Safety valve
11. Non return valve
12. Circulation pump
13. Collectors sensor
14. Collectors heat exchanger sensor
15. Burner heat exchanger sensor

HOT WATER CIRCUIT

20. Safety valve
21. Expansion tank
22. Mains water
23. Recirculation
24. Circulation pump
25. Recirculation sensor
26. Hot water for domestic use
27. Pressure regulator
28. Non return valve
29. Recirculation non return valve


BURNER CIRCUIT

30. Circulation pump
31. Burner heat exchanger circulation pump

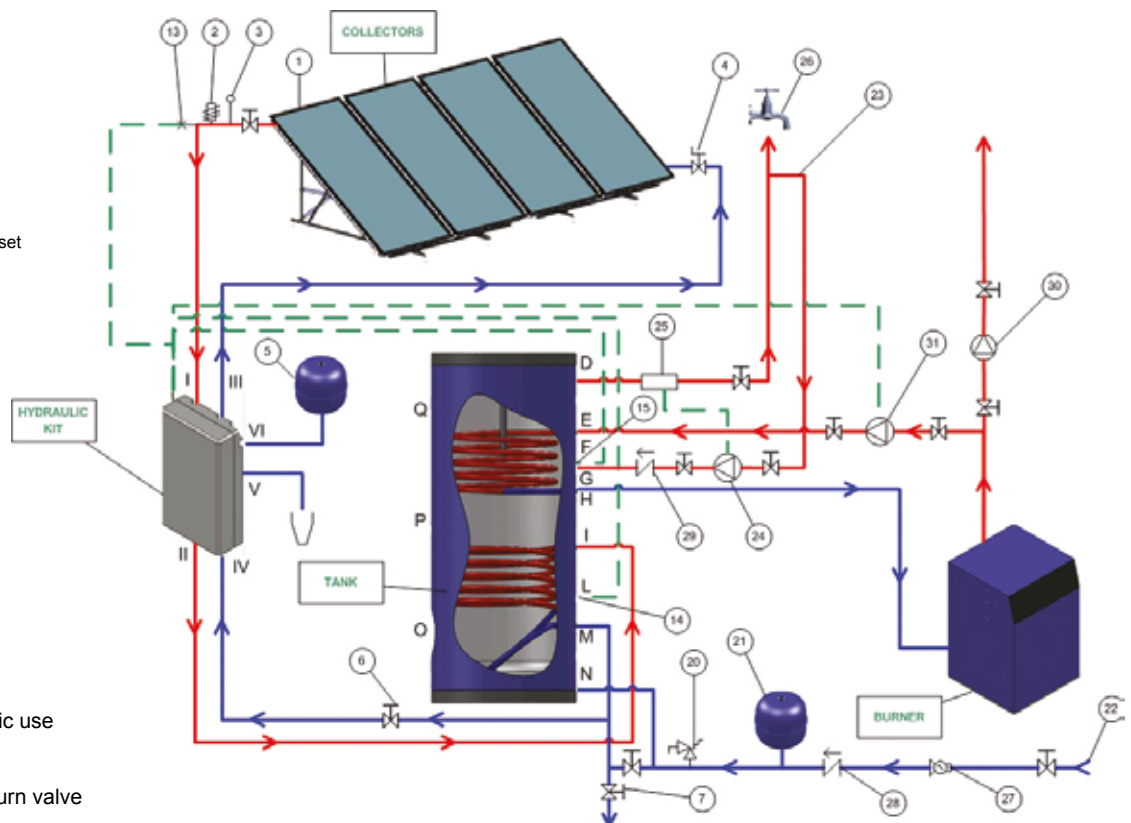

All the necessary connection accessories are contained in an integrated packaging.

All accessories are suitable for use with a water propylene-glycol mixture.

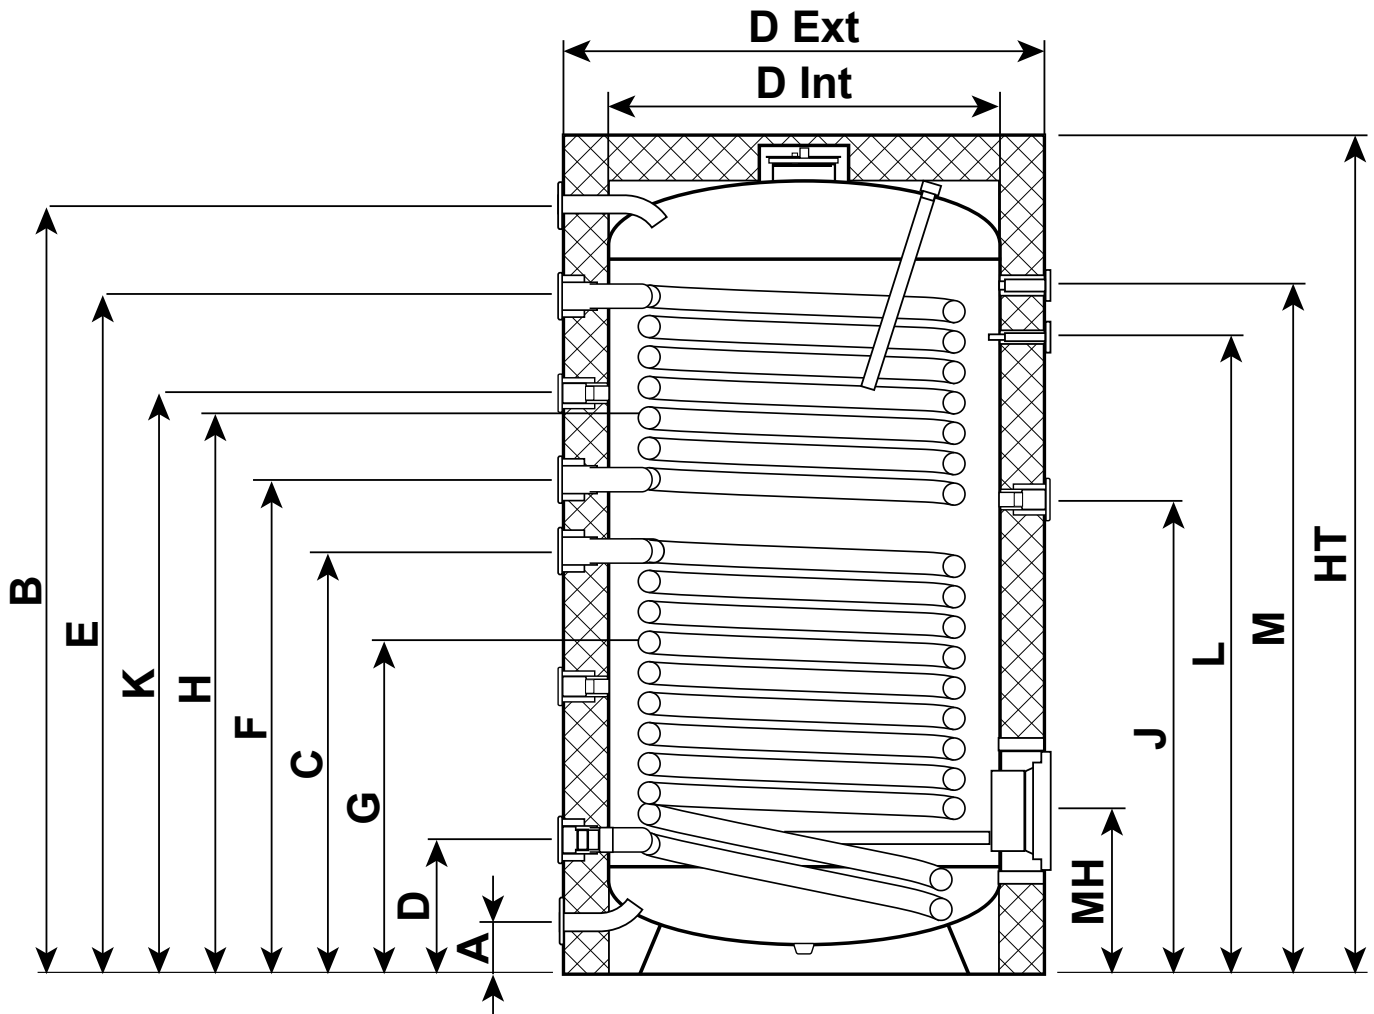

WATER TANK CONNECTION

1. Connect the output IV of the hydraulic unit to the position D, using the brake valve and a valve for the evacuation of the closed loop.(6)
2. Connect output II of the hydraulic unit to the position C.
3. Place the sensor No. 14 (S2) to the socket G.
4. Place sensor No 15 (S3) to the socket H.
5. Connect the pipeline of the mains water input, to which we have connected the safety valve (20), the boiler expansion tank (21), the pressure regulator and the non return valve to the position A.
6. Connect the hot water consumption (26) to the position B. A thermostat mixing valve placement is recommended.
7. Place the thermometer to the position L.
8. Connect the electrical resistance to the position J.

BURNER CONNECTION

9. Connect the hot water pipeline from the central heating boiler to the position E.
10. Connect the water return to position F.

RECIRCULATION CONNECTION

11. Connect the circulation pump of the recirculation (24) to the domestic water return pipeline, as well as the non return valve (29).
12. Connect the recirculation return (23) to the position K.
13. Place the contact hydrostat (hot water outlet) to the hot water outlet (B) and connect it to the circulation pump (24).

HYDRAULIC UNIT

It contains all the basic accessories required for the connection of the collectors to the boiler.

- For the connection of the hydraulic unit to the solar circuit (collectors, system heat exchanger to the inferior part of the boiler) please refer to the hydraulic diagram of solar systems.
- The connection of the expansion vessel to the safety valve of the solar hydraulic unit should have a maximum length of 2 meters, with no bends and no air accumulation points. The union nut should have a diameter of 3/4".
- After having connected the hydraulic unit, the closed loop should be cleaned. System cleaning is carried out with water for 15 minutes, by isolating the circulation pump with the two valves before and after, and by opening the two filling/evacuation valves. The valves for the connection of plastic pipes are male.
- Prior to filling the closed loop with the anti-freeze liquid it is necessary to check the sealing of all the connections. During the cleaning, for example, you can shut one of the two filling/evacuation valves and use a compression pump or water compression from the network to raise the pressure of the circuit to 5 bars for 15 minutes.

ATTENTION! The expansion tank has to be isolated to avoid surpassing the maximum operating pressure.

- The mixing of the anti-freeze liquid must be carried out prior to the filling and at a ratio suitable to resist the minimum ambient temperature at which it is going to operate.
- System filling may be executed either from the upper side of the collector by gravity or through the compression pump from the hydraulic unit. Operating pressure from 1.5 to 3 bars can be executed with pump filling or with the water compression from the network. Constantly check all ventilation points as you fill the circuit.
- All installations and the relative attachments have to conform to the current local regulations (electrical, hydraulic, building, sanitary etc.) in force.
- It is recommended to place a vessel under the hydraulic unit of a capacity suitable to collect the anti-freeze liquid that may run from the security valve. The presence of this vessel is particularly useful during the filling and ventilation phases or during hydraulic testing, as the valve opens at 6 bar.

CLOSED LOOP PIPING

- All pipes starting from and resulting to collectors must be appropriately insulated in order to resist to temperatures from -30°C to +120°C. It is also necessary to protect insulating material from UV rays.
- The thickness of insulation depends on the local climate conditions.
- To minimize heat losses, the distance between collectors and the boiler heat exchanger must be the smallest possible.
- Avoid the concentration of air. If this is not possible, the installation of an automatic ventilator at the air accumulation point. concentration is necessary.
- Pipes diameter must be from Ø18mm to Ø22mm for distances up to 20 meters and Ø15mm for distances up to 12 meters.
- All the union nuts must resist compression 6 bar and temperatures from -30°C to +200°C.
- The annual check of the equipment and its connections is mandatory.

HYDRAULIC UNIT DESCRIPTION

Pumping, regulating, venting unit for forced circulation solar systems. In the hydraulic system, hydraulic balancing, flow measurement and venting can be performed directly in the station. The built-in SETTER Inline PF valve allows the required quantity of liquid in the primary circuit to be exactly and simply set and checked. The continuous venting system meets the most demanding requirements and keeps the system free of air. Systems which are air-free and correctly balanced hydraulically guarantee optimal energy efficiency, and are thus more cost-effective in the framework of the energy-saving directives laid down by law.

Using the scale, which is pre-calibrated for glycol, the technician can set and check the exact flow-rate values on-site. Neither training courses nor expensive measuring devices are required. Installation and venting can be carried out by one person working unaided.

HYDRAULIC UNIT TECHNICAL DATA

Maximum operating temperature:

- Depression (vaporizer side): TB 160°C
- Return (pump side): TB 110°C

Maximum operating pressure: PB 8 bar

- Propulsion compression safety valve: 6 bar

Ventilation pipe: made of brass

Brass valve components

Internal parts: made of stainless steel, brass and plastic. Level index made by borosilicate material.

O Ring EPDM **weatherseals.**

Plain weatherseals resistant to high temperatures and suitable for solar installations.

Insulating material: EPP.

Thread according to DIN 2999/ISO 7 and ISO 228 standards.

Measurement accuracy: $\pm 10\%$ (from the final value).

Anti-freeze liquid

- Water mixture with common anticorrosive and anticoagulant additives (liquid viscosity scale $U = 2.3\text{mm}^2/\text{s}$).
- Heating and cooling water



- I. Pipeline from collectors (Rp $\frac{3}{4}$ " EN 10226-1)
- II. Pipeline towards boiler (Rp $\frac{3}{4}$ " EN 10226-1)
- III. Pipeline towards collectors (Rp $\frac{3}{4}$ " EN 10226-1)
- IV. Pipeline from boiler (Rp $\frac{3}{4}$ " EN 10226-1)
- V. Connection pipeline of the expansion tank (G $\frac{3}{4}$ " ISO 228-1)
- VI. Evacuation pipeline of the safety valve (Rp $\frac{3}{4}$ " EN 10226-1)



1. THERMOMETER

The thermometer with a range from 0°C to 120°C constantly indicates the medium temperature in the flow circuit. The temperature is recorded directly in the medium to minimize the reaction time. The sensor is inserted in a protective pipe so that it can be exchanged without having to empty the system. The thermometer is fitted on a special construction ball valve with an integrated non return valve.

2. WALL ASSEMBLY

For an easy installation, the hydraulic unit has a base slab.

3. DIFFERENTIAL THERMOSTAT

Checks the hot water circulator of the collectors and the burner. It has 3 temperature sensors. Measures collector and boiler water temperature. It receives many possible parameters. It can execute delayed operation start up.

4. SAFETY VALVE

The safety valve guarantees the system data protection against extreme pressures in all function phases.

5. MANOMETER

The manometer, with a range of 0-10 bar indicates the system's pressure.

6. CIRCULATION PUMP

This circulation pump, included as standard in the scope of delivery and integrated in the system, covers a large delivery range. The required operating point can be preselected using one of the three levels. A defective pump can be replaced without having to empty the system using the stop cocks on the suction side (Setter Inline PF) and the pressure side (ball valve).

7 - 8. BALL VALVE FOR THE EASY FILLING AND EMPTYING OF THE CIRCUIT

9. SETTER INLINE PF BALANCING VALVE

Precision adjustment at the balancing valve allows the required delivery quantity to be adapted to system requirements. Flow rate indication is constant, i.e. the adjustment can be immediately verified by means via the flow rate indicator. The indicator is precalibrated for a medium viscosity of 2.3mm²/s. This does away with the need for correction curves. The connection flange on the outlet side is directly screwed onto the 1 1/2" pump connector fittings which means there are no seal locations for further adapter component.

10. VENTING TANK WITH BLEEDER VALVE

Venting tank with bleeder valve. The purpose of the venting tank is to remove air from the medium flowing through the tank. The venting tank can hold up to approx. 250 ml of air and has a bleeder valve for releasing the air. The bleeder valve is routed to the outside through the insulation which means that it can be accessed even when the insulating casing is on. The outlet has a suitable fitting for easy attachment of a hose. The frequency and quantity of the collected air can be used to check the leak tightness of the system.

HYDRAULIC UNIT CONNECTION

1. Connect the pipeline of the upper part of the collector to the hydraulic unit (position I)
2. Connect the pipeline of the upper part of the collector's heat exchanger to the hydraulic unit (position II).
3. Connect the pipeline of the collector's bottom part to the hydraulic unit (position III).
4. Connect the domestic water heat exchanger outlet to the hydraulic position IV.
5. Connect the expansion tank's pipeline (to the position V).
6. Connect the evacuation pipeline of the safety valve to the position VI of the hydraulic unit.

NOTE: The safety valve should have a drain pipe connected to its outlet. This pipe should run to ground level where hot water discharge is safe and clear of any paved areas. Do not seal or block the ends of this drain pipe or the valve outlet. Antifreeze solution may be drained from this pipe during high irradiation situations.

7. Connect sensor Nr. 13 (S1 FKP 6) to the collector's upper part.
8. Connect sensor Nr. 14 (S2 FRP 6) to the lower coil sensor position.
9. Connect sensor Nr. 15 (S3 FRP 6) to the upper coil sensor position.



POST INSTALLATION INSTRUCTIONS

Before using the system make a final check. Open all the valves and check for any kind of leakage. Repeat the inspection after 30 minutes. Check if the system is filled with water and antifreeze fluid according to the company's instructions. In case of any failure condition a specialized technician should be called in.

The solar water heater, in order to reach its highest efficiency rate, needs some hours (depending on the weather conditions and the solar radiation) after the completion of its installation. For this reason, even if the sun shines, it is highly recommended not to consume the hot water during the first hours following its installation.

A basic periodic maintenance will assure the long life and high efficiency of the product.

- It is recommended that the appliance is inspected in situ according to the instructions stated in the guarantee twice a year and checked for possible damage (breaking) of the collectors' glass, leaks in the connecting piping to the mains and to the consumption system, inspection of the pipe insulation and cleaning of the glass.
- If the collectors' glass is broken, it should be replaced immediately.
- It is recommended that the glass is washed at an hour of low sunlight to avoid damages due to expansion-contraction, due to temperature changes.
- If the fittings are worn (screws, pugs, piping, etc), these should be replaced at the owner's cost.
- The level of antifreeze in the closed circuit must be checked annually (as it could need topping up), to ensure the efficient operation.
- In cases where there is to be no use of hot water for long periods of time (e.g. during the summer holidays), it is recommended that the collector surface is covered with an opaque cover in order to avoid the building up of high temperatures, which could trip the thermoelectric fuse of the thermostat and cut the electrical circuit.
- During the build-up of high pressure in the thermal tank, it is possible that the safety valve will open and water will run out. This is a normal function that protects the water storage tank from high pressures. It's necessary to add a pressure reducer, safety valve and expansion tank to the mains pipeline.
- Do not switch on the electrical heating element in the following cases:
 - A) When the mains water supply has been cut
 - B) When the connecting pipes have frozen and there is no water flow from the water storage tank to the taps.

ATTENTION! Place taps with thermostatic regulation up to 38°C for hot water use to prevent burns which may be caused by the high temperature water in the installation.

CHECK LIST

INSTRUCTIONS FOR THE INSTALLER

After the installation is complete, the installer, with the help of the check list below has to check all of the points which are noted and mark in the relevant column with a ✓.

LIST	CHECK
COLLECTORS AND EXTERNAL PIPING	
Is the installation and the fixing of the support base according to the instructions and local regulations?	
Is there an ideal location and facing of the collectors?	
Is there humidity inside the collectors?	
Are the hydraulic connections of the collectors correct?	
Has there been good UV protection on the thermal insulation?	
Is the piping properly insulated?	
Has the installment on the roof been done according to the local regulations?	
HYDRAULIC CONNECTIONS	
Are there any leaks in the closed circuit, the connections, or in the tube heat exchanger ?	
Are the safety valves installed properly?	
Does a mixing valve of hot / cold water exist?	
ELECTRICAL CONNECTION	
Is the electric resistance connected properly? (if it exists)	
Has the electric connection been done according to the local regulations? (insulation, grounding, etc...)	
GENERAL	
Was the guarantee properly filled in and given to the client?	
Were the instructions of use given to the client?	
Was the proper selection of the model made according to the needs of the client?	
Was the client informed of other options for the production of hot water?	

Installer Data

Full name.....
 Address.....
 Telephone.....

Distributor Data

Full name.....
 Address.....
 Telephone.....



Headquarters: 315, Acharnon Str. - 11145, Athens - Greece / **Tel.:** +30 210 2112591

Branch: 4, Slavianska Str. FL 3-2850, Petrich - Bulgaria / **Tel.:** +359 88 777 2092

Website: www.economysolarsolutions.com

Email: info@economysolarsolutions.com